# **Setup Manual**

# 0

This manual provides information on system hardware. Be sure to read this manual first.

# OMRON

# **OMRON Corporation**

**Industrial Automation Company** 

Sensing Devices Division H.Q. **Application Sensors Division** 

Shiokoji Horikawa, Shimogyo-ku, Kyoto, 600-8530 Japan

Tel: (81)75-344-7068/Fax: (81)75-344-7107

#### Regional Headquarters

#### OMRON EUROPE B.V.

Sensor Business Unit. Carl-Benz-Str. 4, D-71154 Nufringen, Germany

Tel: (49)7032-811-0/Fax: (49)7032-811-199

#### **OMRON ELECTRONICS LLC**

1 East Commerce Drive, Schaumburg, IL 60173 U.S.A.

Tel: (1)847-843-7900/Fax: (1)847-843-8568

#### OMRON ASIA PACIFIC PTE. LTD.

83 Clemenceau Avenue, #11-01, UE Square, 239920 Singapore

Cat. No. Z189-E1-02

Tel: (65)6835-3011/Fax: (65)6835-2711

#### OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower, 200 Yin Cheng Road (M), Shanghai, 200120 China

Tel: (86)21-5037-2222/Fax: (86)21-5037-2200

In the interest of product improvement, specifications are subject to change without notice.

Authorized Distributor:	
Cat No. 7189-E1-02	Printed in Japan

0505-0.1M (1103) (M)

## **INTRODUCTION**

Thank you for your purchase of Z550-MC10/MC15 (hereinafter referred to as the Controller). This manual explains how to use the Controller. Please observe the following points when using the Controller.

- Please read and understand this manual thoroughly before using the Controller so that it is not used incorrectly.
- Please keep this manual at hand so that you can refer to it at any time.

# **Operation Procedure and Reference Manual**

The following shows main contents of operation steps and manuals. Select the manual suitable for your purpose and read it before starting operation

Installation



# **Setup Manual**

Contains information on safe use of the unit, series of procedures starting from package content check, installation to cable connection, together with functions and specifications of the unit and its peripheral devices.



## **Operation Manual**

Explains menu operation method and communication method with external devices

INTRODUCTION	Precautions in using the Product(Be sure to read it.) and Table of contents
SECTION 1	Wiring and Connection
SECTION 2	Installation
SECTION 3	Connecting External Devices
SECTION 4	Appendix

# **Setup Manual**

#### READ AND UNDERSTAND THIS DOCUMENT

Please read and understand this document before using the products. Please consult your OMRON representative if you have any questions or comments.

#### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

#### **LIMITATIONS OF LIABILITY**

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### SUITABILITY FOR USE

THE PRODUCTS CONTAINED IN THIS DOCUMENT ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES. Please refer to separate catalogs for OMRON's safety rated products.

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

• Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.

- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical
  equipment, amusement machines, vehicles, safety equipment, and installations subject to separate
  industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### **PERFORMANCE DATA**

Performance data given in this document is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### **ERRORS AND OMISSIONS**

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

#### PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

#### **COPYRIGHT AND COPY PERMISSION**

This document shall not be copied for sales or promotions without permission.

This document is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this document in any manner, for any other purpose. If copying or transmitting this document to another, please copy or transmit it in its entirety.

## **Meanings of Signal Words**

The following signal words are used in this manual.



Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.

## **Meanings of Alert Symbols**

The following alert symbols are used in this document.



Cautions to indicate potential laser beam hazard



Indicates general prohibitions for which there is no specific symbol.

## Alert statements in this Manual

The following alert statements apply to the products in this manual. Each alert statement also appears at the locations needed in this manual to attract your attention.

## **⚠** WARNING

This product is not designed or rated for ensuring safety of persons. Do not use it for such purposes.



## **Laser Safety**

## **⚠** WARNING

Do not expose your eyes to the laser radiation either directly or indirectly (i.e., after reflection from a mirror or shiny surface).



The laser radiation has a high power density and exposure may result in loss of sight.

Sensor Head is a Class 3B Laser Product according to EN60825-1 (IEC60825-1) and Class IIIB Laser Product according to FDA (21 CFR1040.10) (see note). This product is meant to be built into final system equipment. Pay special attention to the following precautions for the safe use of the product:

**Note**:Europe: Class 3B of EN60825-1: 1994 = IEC60825-1: 1993

U.S.A.: Class IIIB of FDA (21 CFR1040.10)

	Z550-SW70
Wavelength	658 nm
Maximum pulse duration	17.5 ms
Cycle	0.5 to 25 ms
Peak power	15 mW max.
Classification	3B

- (1)Use this product as specified in this manual. Otherwise, you may be exposed to hazardous laser radiation.
- (2)This product radiates laser beams in the visible light range. Do not expose your eyes directly to the laser radiation. Ensure that the laser beam path is terminated during use. If a mirror or shiny surface is positioned in the laser beam path, ensure that the reflected beam path is also terminated. If the Unit must be used without terminating the laser beam path, position the laser beam path so that it is not at eye level.
- (3)To avoid exposure to hazardous laser radiation, do not displace nor remove the protective housing during operation, maintenance, and any other servicing.
- (4)The user should return the product to OMRON for all repair and servicing.
- (5)As for countries other than those of Europe and the U.S.A., observe the regulations and standards specified by each country.

As for the Laser Product Classifications, refer to the Appendix.



p.65

## ■ Labeling on Laser Use

The following warning label is attached to the side of the sensor.

#### Z550-SW70



#### Re-labeling

The following labels are provided, to be used selectively according to countries.

for use in the U.S.: FDA label (Aperture label, Caution logo label, Certification and Identification label)

for use in countries other than the U.S.: Warning label according to EN/IEC standards.

Be sure to turn off the sensor before replacing the label, or your hand or other body parts may be exposed to the hazardous laser beam radiating from the sensor.

#### Use in the U.S.

When a laser product mounted on a certain device is to be used in the U.S., it has to meet the requirements set forth by the FDA (regulations for laser products set forth by the Food and Drug Administration).

Applications have been approved by CDRH (Center for Devices and Radiological Health) for Z550-SW70. Three different FDA labels are enclosed in the sensor package. Attach them to the sensor body.

This product is designed to be built into the finished system unit. Refer to the following technical standard for installation.

21CFR1040.10 and 1040.11

#### **FDA Labels for Laser Products**

#### Class III B DANGER logo type



#### Aperture Label


AVOID EXPOSURE Laser radiation is emitted from this aperture

#### Certification and Identification Label

This laser product complies with 21 CFR 1040.10 and 1040.11.
OMRON Corporation
Shiokoji Horikawa, Shimogyo-ku, Kyoto 600-6530.JAPAN
Place of manufacture:
AYABE Factory, OMRON Corp.
Manufactured in

Be sure to attach FDA labels; do not attach EN/IEC WARNING label by mistake.

#### **Areas to Attach Labels**

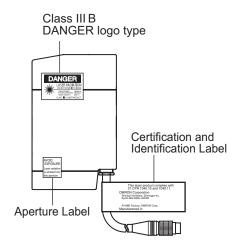


#### Use in Countries Other than the U.S.

Replace the warning label in Japanese on the sensor main body with the attached EN/IEC warning label upon use in countries other than the U.S. Attach the label in the area where the original Japanese warning label was provided.

EN60825-1(IEC60825-1) standard is applied to products exported to European countries. This product conforms to the standard.

#### **EN/IEC Warning Labels**

Z550-SW70

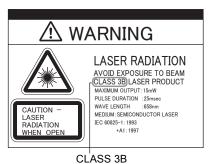

# Regulations and standards

This Z550 conforms to following EC directives and EN standards

1. EC Directives

EMC Directive: No.89//336/EEC

2. EN Standards

EN61326: 1997+A1:1998+A2:2001(EMI:Class A)

## **Precautions for Safe Use**

Please observe the following precautions for safe use of the products.

#### Installation Environment

- Do not use the product in environments where it can be exposed to inflammable/explosive gas.
- Do not install the product close to high-voltage devices and power devices in order to secure the safety of operation and maintenance.

## Power Supply and Wiring

- Make sure to use the product with the power supply voltage specified by this manual.
- Make sure to use crimp terminals when performing the wiring of the product. Do not simply connect the twisted ends of the wires directly to the terminal block.
- Use a power supply cable and crimp terminals of the specified size.
- Check carefully that the wiring is correct before turning the power supply on.
- Make sure to install the terminal block protection cover after wiring.
- Use a DC power supply with safety measures against high-voltage spikes (safety extra low-voltage circuits on the secondary side) for the power supply to the terminal blocks of the Controller.

**₽.24** p.24

· Make sure to tighten all installation screws securely.

#### Other

- Do not disassemble, repair, or modify the product.
- · Dispose of this product as industrial waste.

## Precautions for Correct Use

Please observe the following precautions to prevent failure to operate, malfunctions, or undesirable effects on product performance.

#### Installation of the Controller


#### Installation Site

Do not install the Controller in locations subjected to the following conditions:


- Ambient temperature outside the range of 0 to +50°C
- · Condensation due to rapid temperature fluctuations
- Relative humidities outside the range of 35 to 85%
- · Corrosive or flammable gases
- Dust, salt, or iron particles
- · Direct vibration or shock
- · Reflection of intense light (such as other laser beams or electric arc-welding machines)
- · Strong magnetic fields
- · Direct sunlight
- · Contact with water, oil, and chemical agents

## ■ Mounting of the Controller

To improve heat dissipation, install the controller in the following direction only:

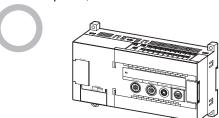


Do not install the controller in the orientations shown in the following diagram.

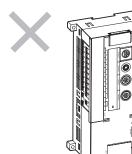



#### Ambient temperature

- Maintain a minimum clearance of 50 mm above and below the Controller to improve air circulation.
- Do not install the Controller immediately above significant heat sources, such as heaters, transformers, or large-capacity resistors.
- Do not let the ambient temperature exceed 50°C.
- Provide a forced-air fan cooling or air conditioning if the ambient temperature is near 50°C so that the ambient temperature never exceeds 50°C.

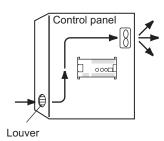


#### Ambient Illumination

- Do not let the ambient illumination exceed 3000 lx.
- When using the Controller near lighting equipment that turns on and off continuously, reduce the influence of the light by, for example, using a light baffle.

#### Noise Resistance

- Do not install the Controller in a cabinet containing highvoltage equipment.
- Do not install the Controller within 200 mm of power cables.

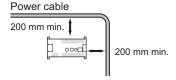

#### Sensor

Install the sensor in a clean environment and keep the optical filter on the front panel of the sensor free from oil and dust. If affected by oil or dust, clean the filter as follows:

- Use a blower brush (normally used to clean camera lenses) to blow large dust particles away from the surface. Do not blow the dust away with your mouth.
- Use a soft cloth (for lenses) with a small amount of alcohol to remove the remaining dust.
   Never use strong force when wiping the sensor. The filter may become scratched, which can cause errors.

## When replacing the sensor connected to the Controller:

Turn off the download function when replacing the sensor.

If the sensor is replaced while the download function is on, measurements cannot be taken correctly with the new sensor because the old sensor information (such as the measurement range) is still stored.



Operation Manual p.181

#### Environment

The sensor cannot detect the following types of objects accurately: Materials with extremely small reflectances, objects with small curvatures, or objects tilted to a large degree

## **Component Installation and Handling**

#### Dedicated Components

Make sure to use the dedicated components for the sensor and console connected to this controller.

Sensor: Z550-SW70Console: Z300-KP

## Connecting/Disconnecting Cables

Always turn the power supply off before connecting or disconnecting any cables.


## Touching Signal Lines in Connectors or Terminals

To prevent damage from static electricity, use a wrist strap or another device for preventing electrostatic discharges when touching terminals or signal lines in connectors.

## Wiring

When using a transformer for the Controller's driving power supply, use an isolation transformer in the way shown below.


Do not use an auto-transformer. Doing so may result in equipment failure.

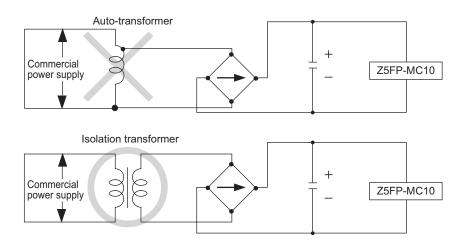

## Turning off the Power

Do not turn the power supply off while the message indicating that processing is being performed is being displayed. Data in the memory will be destroyed, and the Controller may not operate correctly the next time it is started.

Example: Saving

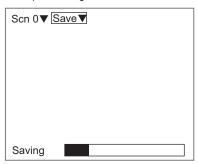

## Using the RESET Signal

Do not input the RESET signal immediately after power supply is turned on. When using the RESET input to synchronize startup timing, wait at least 1 second after the Controller's power supply is turned on before turning on the RESET terminal.

## Securing the Video Monitor (When Using the Recommended F150-M09)

If the video monitor case is metallic, observe the following precautions to prevent noise interference, because the video monitor case is connected to the 0V line in the internal circuits.

- · Do not ground the video monitor.
- Do not ground the metallic part of the connector.
- Secure the video monitor with plastic screws if it is being mounted to a metallic surface.

## Warming Up

After turning on the power supply, allow the Controller to stand for at least 30 minutes before use. The circuits are unstable immediately after the power supply is turned on and attempting measurement may result in inconsistent measurement values.

## **Editor's Note**

## **Visual Aids**



Indicates information required to take full advantage of the functions and performance of the product. Incorrect application methods may result in data corruption or damage to the product. Read and follow all precautionary information.



Indicates points that are important to achieve the full product performance, such as operational precautions and application procedures.



Indicates where to find related information.



Indicates information helpful in operation.

# **Table of Contents**

INTRODUCTION	1
Warranty, Limitations of Liability, Application Considerations Disclaimers	2
Editor's Note	13
Table of Contents	15
SECTION 1 Wiring and Connection	17
Basic System Configuration	18
Component Names and Functions	19
Connecting Peripheral Devices	21
Wiring Power Supply and Ground	23
SECTION 2 Installation	25
Mounting the Controller	26
Mounting the Sensor	28
SECTION 3 Connecting External Devices	33
Terminal Block Connections	34
RS-232C Connections	38
Linear Sensor Controller Connections	40
SECTION 4 Appendix	45
Troubleshooting	46
Inspection	48
Specifications and Dimensions	49
Requirements from Regulations and Standards	58

Memo

# **SECTION 1** Wiring and Connection


Basic System Configuration	18
Component Names and Functions	19
Connecting Peripheral Devices	21
Wiring Power Supply and Ground	23

# **Basic System Configuration**

The following diagram shows the basic Controller system configuration.




- · Dedicated products must be used for some of the components. Some of the devices may be damaged if products other than the specified dedicated products are used. These items are indicated with asterisks.
- · Always turn the power supply off before connecting or disconnecting cables. The peripheral devices may be damaged if connected or disconnected while the power supply is turned on.

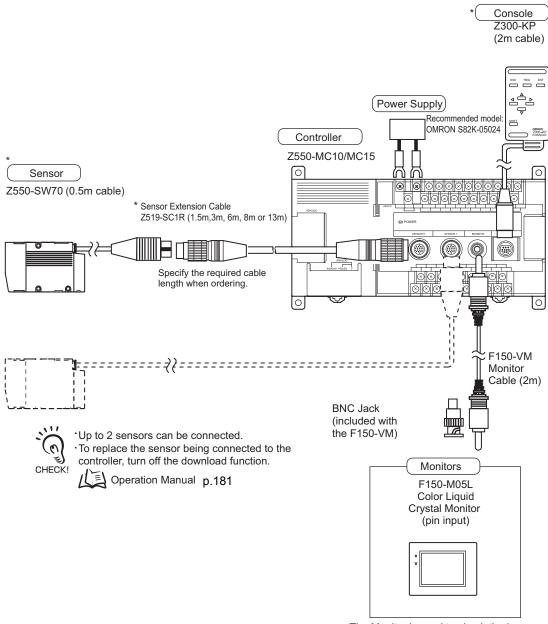

# **Component Names and Functions**




## Sensor

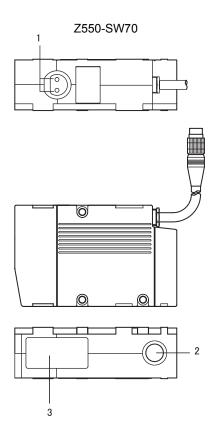

No.	Name	Function
1	Laser beam warning indicators	When the laser beam is turned on, both indicators will turn on.  When the laser beam is turned off, both indicators will turn off.  For 15 to 25 seconds after the power supply is turned on, both indicators will be off indicating that the laser beam is off.
2	Laser emitter	Emits the laser beam.
3	Laser receiver	Receives the laser beam.

## Controller

#### Z5FP-MC10/MC15

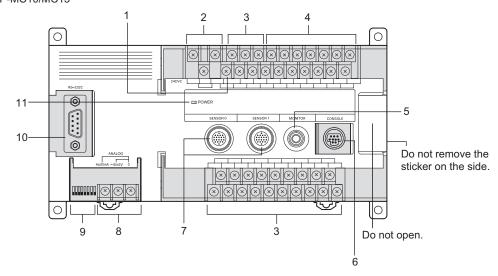

Shading indicates parts that are lifted to see the terminals underneath.

No.	Name	Function
1	Ground wire terminal	Connected to the ground wire.
2	Power supply terminal	Connected to the power supply.
3	Output terminals	Connected to external devices such as a PLC.
4	Input terminals	Connected to external devices such as a PLC.
5	Monitor connector	Connected to the monitor.
6	Console connector	Connected to a console.
7	Sensor connector	Connected to the sensor.
8	Analog output terminals	Connected when using analog output.
9	Dip switch	Used to select the language of the messages displayed on the screen.*
10	RS-232C connector	Connected to external devices such as a personal computer or PLC.
11	POWER indicator lamp	Lit while the power is on.

#### \* Dip switch settings

Switch 1	Switch 2	Switch 3	Switch 4	Switch 5	Switch 6	Switch 7	Switch 8
Always off	Off: Japanese On: English	Always off		Always off	Always on	Always off	
OFF	Japanese English	OFF		OFF	ON		DFF

# **Connecting Peripheral Devices**

This section shows how to connect peripheral devices to the Controller.



Always turn OFF the power supply before connecting or disconnecting a peripheral device's cable. The peripheral device may be damaged if it is connected while the power is ON.




The various connectors on the Controller are capped when the Controller is shipped.

When a connector is not being used, leave the cap in place or replace the cap to protect against dust, dirt, and static




## **Connecting a Console**

Connect the console Z300-KP to the Controller's console connector.

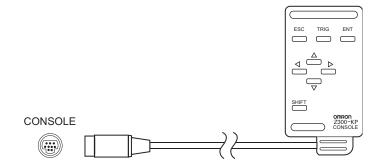

## **Connecting a Monitor**


Connect the monitor cable F150-VM to the Controller's monitor connector.

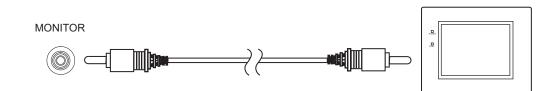




## **Connecting a Sensor**

Connect the sensor to the Controller's sensor connector. Three ferrite cores (supplied with the sensor) must be attached to the sensor cable. Two ferrite cores can be connected within 100 mm from the sensor and within 100 mm from the controller's connector, respectively.

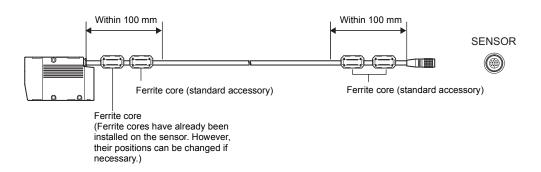

When using an extension cable, make sure that two ferrite cores are connected within 100 mm from the sensor and within 100 mm from the controller's connector, respectively.

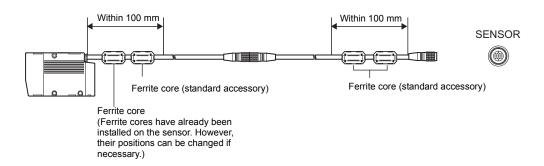

# Wiring Power Supply and Ground

Wire the power supply and the ground to their respective terminals. Tighten the screws using a torque between 0.5 and 0.6 N·m. After wiring, confirm that the wiring is correct.



Reinstall the terminal block protection covers after wiring so that the terminal blocks are covered.



## **Crimp Terminals and Cables**

The terminal block uses M3 terminal screws.

Use appropriate crimp terminals for M3 screws as shown below.

#### Recommended Model


	Manufacturer	Model	Recommended wire size
Forked	J.S.T. Mfg Co., Ltd.	V1.25-N3A	1.31 to 1.65 mm <sup>2</sup>
6.2mm max.			
Round	J.S.T. Mfg Co., Ltd.	V1.25-MS3	
6.2mm max.			



## **Ground Wiring**

Always connect a ground wire to the ground terminal of the Controller independently of other devices. To avoid grounding problems, do not share the ground wire with any other devices or wire the ground to the building's steel framing.

Use a grounding point that is as close as possible and keep the ground wiring as short as possible.

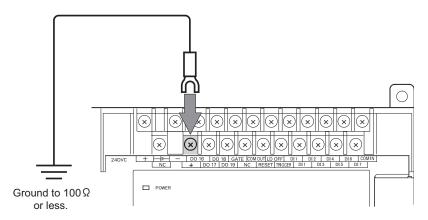



## Wiring the Power Supply

Wire the power supply unit independently of other devices. In particular, keep the power supply wired separately from inductive loads.

Use a power supply that meets the following specifications.

#### Specifications


Output current	Power supply voltage
1.6 A min.	24 V DC (21.6 to 26.4 V DC)

#### Recommended Model

Manufacturer	Model
OMRON Corporation	S82K-05024



- Use a DC power supply with safety measures against high-voltage spikes (safety extra lowvoltage circuits on the secondary side).
- Use a UL class II DC power supply if UL recognition is required in the entire system.
- Keep the power supply wiring as short as possible.

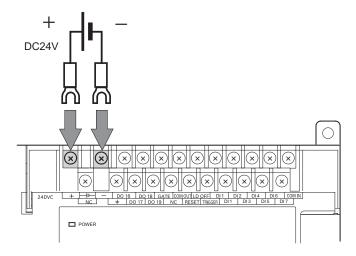

# **SECTION 2** Installation

Mounting the Controller	26
Mounting the Sensor	28


# **Mounting the Controller**

There are two ways to mount the controller: DIN track mounting or surface-mounting.




## **DIN Track Mounting**

The controller can easily be mounted on or removed from a 35-mm width DIN track.

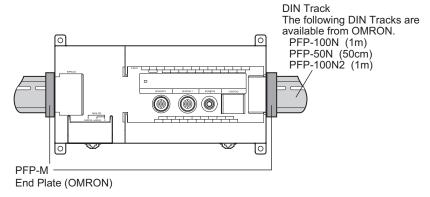


## Mounting the Controller

Hook the controller into the DIN track as shown in the diagram and then press in at the bottom until the controller locks into place.

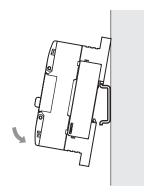


## Removing the Controller

Use a flat-bladed screwdriver to pull the hook down and then pull out the controller from the bottom.

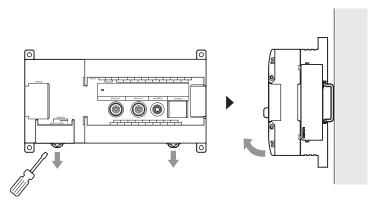

# **Surface-Mounting**

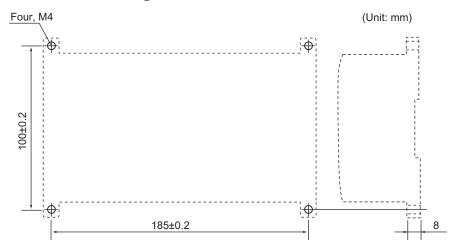

# **Mounting the Sensor**

## WARNING

Do not expose your eyes to the laser radiation either directly or indirectly (i.e., after reflection from a mirror or shiny surface).







Only controllers designed specifically for the Controller can be used.


Using another type of controller may result in damage to the sensor or controller.



## **Mounting Direction**


## Mounting Near Walls

If the sensor receives light reflected from a wall surface, it cannot perform the measurement accurately. The sensor should be mounted in the way shown below if it is not possible to mount it away from the wall, i.e., such that the plane containing the emission axis and the reception axis is parallel to the wall surface, preventing interference from light reflected from the wall surface. Also, applying matt black coating to the wall surface will help to reduce the amount of light reflected.

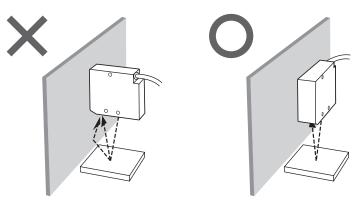


#### Narrow Grooves or Indentations

If the workpiece to be measured is surrounded by indented internal walls or located in a narrow groove area, mount the sensor in such a way that the emission axis and the reception axis are not blocked by the internal walls.

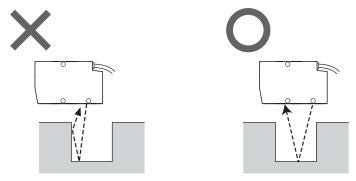

## Measurement range

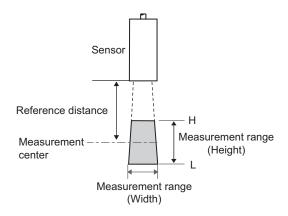

Z550-SW70 (Installation is possible for diffuse reflection only. Installation for regular (mirror) reflection is not possible.)


Measurement range	Reference distance (Diffuse reflection)	Measurement range Direction of height	Measurement range Width direction (H side)	Measurement range Width direction (L side)
10mm	178mm	10mm	62mm	65mm
30mm	192mm	30mm	63mm	72mm
60mm	210mm	60mm	64mm	81mm
100mm	230mm	100mm	64mm	92mm
160mm	260mm	160mm	64mm	109mm
240mm	300mm	240mm	64mm	132mm



Select a mounting condition of the sensor in [System/Environment] from the menu, and then mount the sensor at a distance where it can accurately measure workpieces.



If the connector chassis of a sensor or extension cable makes contact with a noise source, operation may not proceed normally. Insulate the connector chassis before use.

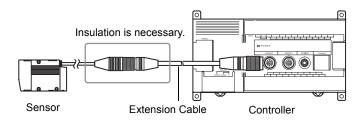




## **Mutual Interference**

When using two or more sensors mounted adjacently, make sure that the spots (shown below) produced by other sensors are outside the shaded areas.


## Z550-SW70

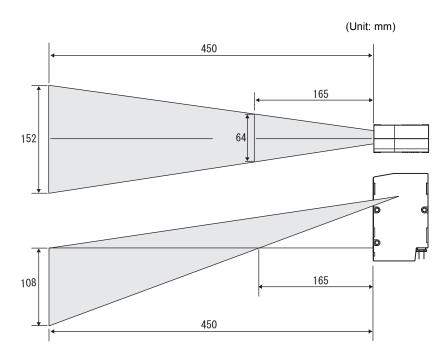




# **Mounting Hole Dimensions**

## Z550-SW70

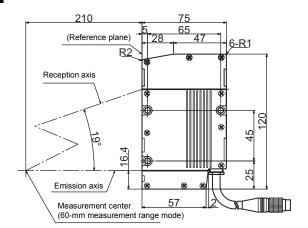

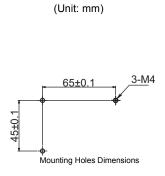

MEMO

# **SECTION 3 Connecting External Devices**

Terminal Block Connections	34
RS-232C Connections	38
Linear Sensor Controller Connections	40

## **Terminal Block Connections**

Measurement command signals are input and measurement results are output via the terminal blocks of the Controller.

This section explains how to connect the terminal blocks to the Controller.

Refer to the separate volume, Operation Manual, for details on I/O formats.



Reinstall the terminal block protection covers so that the terminal blocks are covered after wiring.



## **Crimp Terminals and Cables**

The terminal blocks use M3 terminal screws.

Use appropriate crimp terminals for M3 screws as shown below. Tighten the terminal screws securely using a torque between 0.5 and 0.6 N·m.

#### Recommended Model

	Manufacturer	Model	Recommended wire size
Forked	J.S.T. Mfg Co., Ltd.	V1.25-N3A	1.31 to 1.65 mm <sup>2</sup>
6.2mm max.			
Round	J.S.T. Mfg Co., Ltd.	V1.25-MS3	
6.2mm max.			



### **Internal Specifications**




Use a DC power supply with safety measures against high-voltage spikes (safe extra low-voltage circuits on the secondary side).

#### Input Specifications

Item	Specification
Model	Z550-MC10 (NPN mode) Z550-MC15 (PNP mode)
Input voltage	12 to 24 VDC ±10%
ON current *1	5 to 15 mA
ON voltage *1	8.8 V max.
OFF current *2	0.1 mA max.
OFF voltage *2	4.5 V min.
ON delay	RESET input:10 ms max.
ON delay	Other inputs: 0.5 ms max
OFF delay	RESET input:15 ms max.
Of F delay	Other inputs: 0.7 ms max.
Internal circuits	COM IN  Input terminal  COM IN  COM IN

**Output Specifications** 

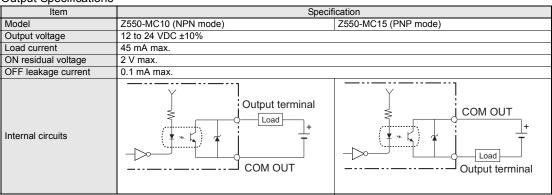



Do not exceed the maximum load current specified for the Controller.

ON Current/ON Voltage

This refers to the current or voltage values needed to shift from the OFF $\rightarrow$ ON state.


The ON voltage value is the potential difference between each of the input terminals and COM IN.

OFF Current/OFF Voltage \*2

This refers to the current or voltage values needed to shift from the ON→OFF state.

The OFF voltage value is the potential difference between each of the input terminals and COM IN.

## **Terminal Names**

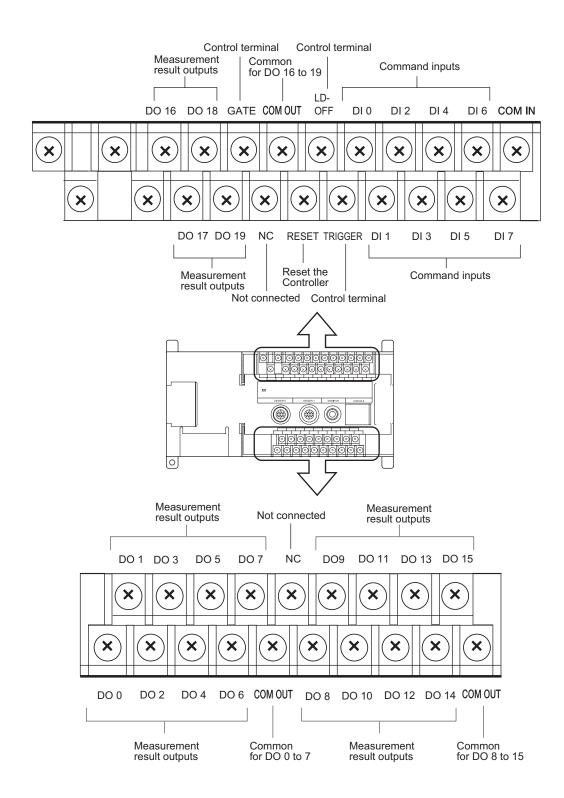



Refer to the separate volume, Operation Manual, for the role of each terminal.



- Do not reverse the connections of the signal terminals and COM terminals.
- RESET Terminal

Do not input the RESET signal immediately after turning the power supply on. When using the RESET signal to synchronize the startup timing, wait at least 1 second after turning the Controller's power supply on before turning the RESET terminal on.



The initial status of the output terminals is off. The terminals may turn on for approximately 0.5 seconds when the power supply is turned on, however. Make sure that these outputs are not treated as actual signals by external devices.

### **RS-232C Connections**

The RS-232C port of the Controller can be used to connect input signals such as measurement triggers or output signals such as measurement results. Additionally, data that has been set in the Controller can be backed up in a personal computer. This section explains how to establish an RS-232C connection. Refer to the separate volume, Operation Manual, for details on communication specification settings and I/O formats.




In some situations, the RS-232C terminal transmits signals when the power supply is turned on or off, or reset.

Make sure that these signals are not treated as actual signals by external devices.



The Controller's RS-232C connector uses a 9-pin D-SUB female connector. The pins are arranged as follows.

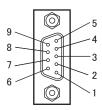

Pin No.	Signal name	Function
1	FG (GND)	Protective frame ground
2	SD (TXD)	Transmission data
3	RD (RXD)	Reception data
4	RS (RTS)	Request to send
5	CS (CTS)	Clear to send
6	NC	Not connected
7	NC	Not connected
8	NC	Not connected
9	SG (GND)	Signal ground

Use a compatible connector.

#### Recommended Model

	Manufacturer	Model
Plug	OMRON Corporation	XM2A-0901
Hood	OMRON Corporation	XM2S-0911

## Wiring

The maximum cable length is 15 m.

#### Standard

Cont	roller			External	device
Signal	Pin No.			Pin No.	Signal
SD(TXD)	2			*	SD(TXD)
RD(RXD)	3	-		*	RD(RXD)
RS(RTS)	4	h l	Г	*	RS(RTS)
CS(CTS)	5	Η (		*	CS(CTS)
SG(GND)	9	<u> </u>		*	SG(GND)

Use a shielded cable.


### ■ Wiring for RS/CS Control

Cont	roller	]		External	device
Signal	Pin No.			Pin No.	Signal
SD(TXD)	2		$\Delta$	 *	SD(TXD)
RD(RXD)	3			*	RD(RXD)
RS(RTS)	4			 *	RS(RTS)
CS(CTS)	5		$\bigcap$	*	CS(CTS)
SG(GND)	9		$\bigvee$	 *	SG(GND)

Use a shielded cable.

### **Connection Method**

Align the connector with the socket and press it straight into place, then fix it with the screws on both sides of the connector.

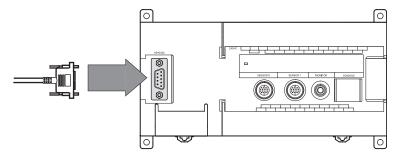



- Turn the power supply off when connecting or disconnecting a cable. Failure to do so may cause damage to peripheral devices.
- · Always tighten the connector screws securely.

<sup>\*</sup>Pin numbers on the external device will depend on the device being connected. Refer to the manual for the personal computer or PLC being connected.

## **Linear Sensor Controller Connections**



### **Crimp Terminals and Cables**

The terminal blocks use M3 terminal screws.

Use appropriate crimp terminals for M3 screws as shown below. Tighten the terminal screws securely using a torque between 0.5 and 0.6 N·m.

#### Recommended Model


	Manufacturer	Model	Recommended wire size
Forked	J.S.T. Mfg Co., Ltd.	V1.25-N3A	1.31 to 1.65 mm <sup>2</sup>
6.2mm max.			
Round	J.S.T. Mfg Co., Ltd.	V1.25-MS3	
6.2mm max.			




### **Terminal Names**




Reinstall the terminal block protection covers so that the terminal blocks are covered after wiring.

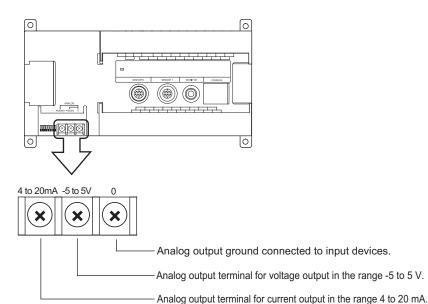


## **Internal Specifications**

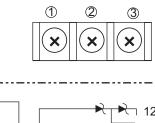

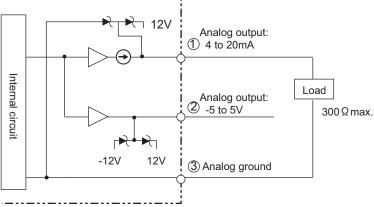


### **Connection Examples for the Linear Sensor Controller**


Connecting to the Linear Sensor Digital Panel Meter (K3TS)

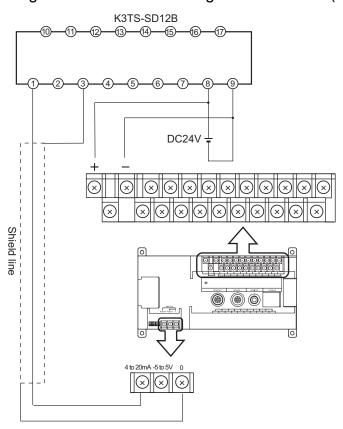


### Connecting to the Linear Sensor Controller (K3AS)

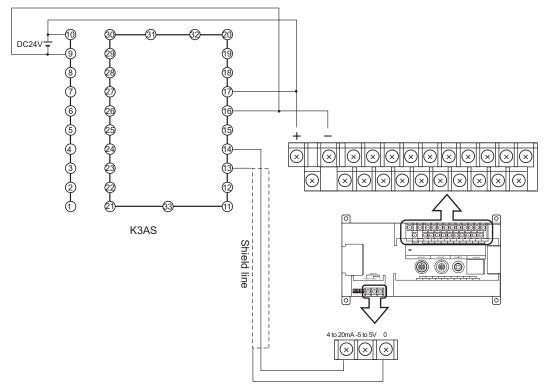


### Connecting to the Scaling Meter (K3TJ)

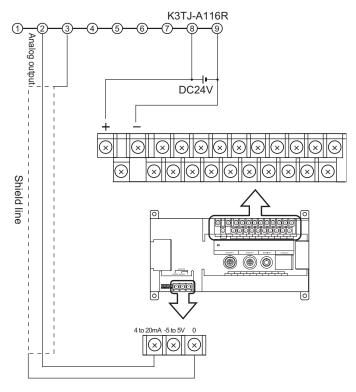

### Connecting to the Digital Panel Meter (K3NX)

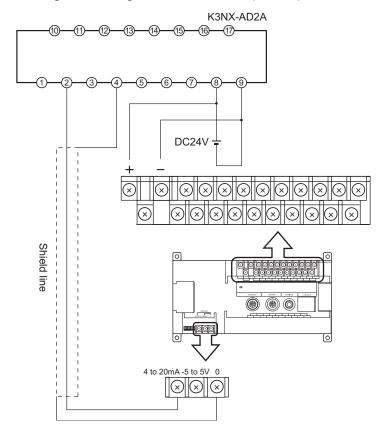

Connecting to the Linear Sensor Interface Unit (CQM1-LSE)

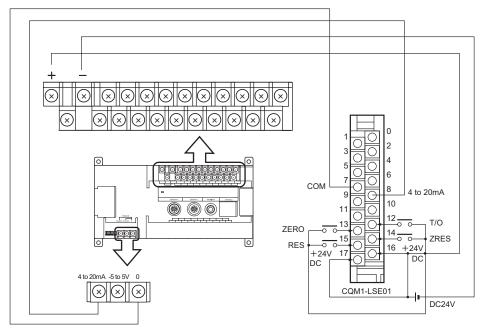

# **SECTION 4 Appendix**

Troubleshooting	46
Inspection	48
Specifications and Dimensions	49
Requirements from Regulations and Standards	58

## **Troubleshooting**

This section provides information on hardware errors and temporary remedies to be taken. Refer to this section before requesting service from your OMRON representative.



### Connection Errors

Problem	Probable cause	Reference
The Power indicator	The power supply is not connected properly.	p.23
does not light up.	The 24 V DC (21.6 to 26.4 V DC) supply voltage has dropped.	
The video monitor is	The power supply to the video monitor is not turned on.	p.18
blank.	The monitor cable is not connected properly.	
	The video monitor is malfunctioning.	
	(In the case of a liquid crystal display monitor) The capacity of the power supply is insufficient.	
The video monitor image	There is electric noise entering from the power supply or cables.	-
is not clear.	The monitor cable is not connected properly.	
Cannot make key inputs from the console.	The console cable is not connected correctly.	p.18
No image is displayed.	The sensor cable is not connected correctly.  There is no workpiece inside the measurement range.	p.18
	The sensor is not mounted in the correct position.	p.29



#### Sensor Errors

Problem	Probable cause	Reference
The measurement range is different from that of the sensor specification.	When you replaced the sensor connected to the controller, did you turn off the download function?	(Operation) p.181



### Terminal Block Errors

Problem	Probable cause	Reference
Trigger signals (input	The cables are not wired correctly.	p.34
signals) are not received.	The signal line is disconnected.	
	The Controller is not in the Run mode.	
Signals cannot be output	The trigger signal has not been input.	p.34
externally.	The cables are not wired correctly.	
	The signal line is disconnected.	
	The Controller is not in the Run mode.	



### RS-232C Communication Errors

Problem	Probable cause	Reference
No communication is	The cables are not wired correctly.	p.38
possible.	The communication specifications of the Controller do not match those of the external device.	
	The Controller is not in the Run mode.	
The unit operates well initially, but after a while there is no response from the Controller.	The buffers on the receiving side (PC) are full. Check whether they are set to receive data properly.	-

## Inspection

In order to ensure the optimal performance of the Controller, carry out the maintenance procedures given below.



- Turn the power supply off and take safety precautions before conducting inspections.
- Do not use thinners or benzene to clean the Controller.



### Cleaning

### Optical Filter on Front Panel of Sensor

Use a blower brush (normally used to clean camera lenses) to blow large dust particles away from the surface. Do not blow the dust away with your mouth.

Use a soft cloth (such as a lens cleaning cloth) moistened with a small amount of alcohol to completely remove the small dust particles.



Never wipe the optical filter hard. The filter may become scratched, which can cause errors.

### Cleaning of Equipment

Remove dirt on equipment by gently wiping with a soft cloth.




### Inspection

Inspection points	Details	Tools required
Power supply	The voltage measured at the power supply terminal block must be within the rated voltage range, 24 V DC (21.6 to 26.4 V DC).	Circuit tester
Ambient temperature	The operating ambient temperature inside the cabinet must be between 0 and 50°C.	Thermometer
Ambient humidity	The operating ambient humidity inside the cabinet must be between 35% and 85%.	Hygrometer
Installation condition	Cables and connectors connected to each device must be correctly inserted and locked.	Screwdriver

## **Specifications and Dimensions**

Sensor Z550-SW70

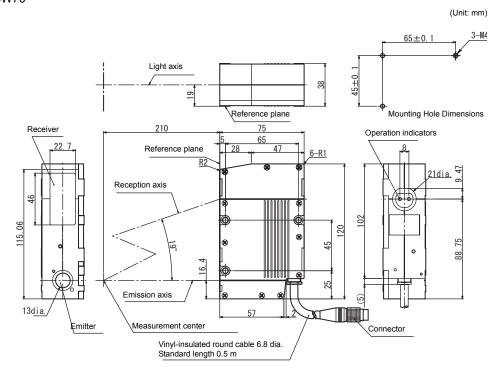

Sensor Installation		Diffuse reflection only
Reference distance (direction of height)		210mm (for 60-mm measurement range mode)
Measure-	Direction of width	70mm (at 200 mm-reference distance)
ment range	Direction of height *1	±30 mm max. (for 60-mm measurement range mode)
Light source		Visible semiconductor laser (wave length: 658 nm, 15 mW max, class 3B)
Beam dimensions *2		120 μm x 75 mm typical at the 200 mm-reference distance
Resolution in the direction of width *3		0.1 mm
Resolution in the direction of height *4		10 μm
Linearity in the direction of height *5		±0.5% F.S.
LED indicator lamp		Lit when the laser is on
Temperature characteristic *6		0.1% F.S./°C


Operation	Degree of protection	IP66
environment robustness	Ambient operating illumination	Illumination at light-receiving surface: 3,000 lx max., incandescent light
	Ambient temperature	0 to +50°C at operation, -15 to +60°C at storage (no freezing)
	Ambient humidity	Operating and storage: 35% to 85% (no condensation)
	Vibration (durability)	10 to 150 Hz (at a double amplitude of 0.35 mm) for 8 minutes each in the X, Y, and Z directions
Materials		Body: Aluminum die-cast Cable sheathing: Heat-resistant PVC Connector: Zinc alloy and brass
Cable length		0.5m
Minimum bending radius		68mm
Weight		Approx. 550g
Accessory		CLASS 3B Warning label (IEC60825-1: 1993 +A1: 1997) × 2

\*1 For 60-mm measurement range mode




Other range mode p.29

- \*2 Defined as 1/e² (13.5%) of the central light intensity. Leakage of light is also present in areas other than those defined. Thus, there are some influences in cases where the reflection factor of the area surrounding the workpiece is higher than that of the workpiece itself.
- \*3 When an OMRON-standard workpiece (alumina ceramics) is placed at 200-mm distance, and edge position is measured. 60-mm measurement range mode is used. The average of 16 measurements is taken. Note that the resolution performance may not be satisfied in the presence of strong magnetic fields.
- \*4 When an OMRON-standard workpiece (alumina ceramics) is placed at 200-mm distance, and its average height of all lines is measured. The average of 16 measurements is taken. Note that the resolution performance may not be satisfied in the presence of strong magnetic fields.
- \*5 The error in relation to the ideal straight line when the average height of all lines on an OMRON-standard workpiece (alumina ceramics) is measured. The degree of linearity may change depending on the workpiece.

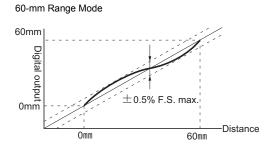

\*6 The value obtained at measurement with the space between the sensor and the workpiece fixed with an aluminum jig. The measurement range is 60 mm.

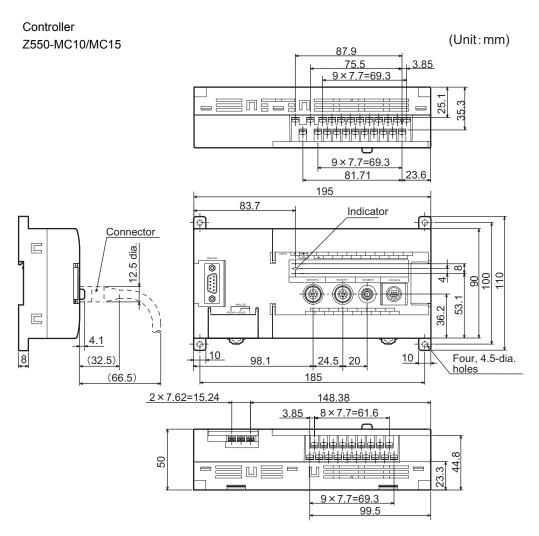

<u>.</u>	
Power supply voltage	21.6 to 26.4 V DC
Current consumption	1 A max. (with 2 sensors connected) *1
Insulation resistance	Between the group of external DC terminals and the ground terminal: 20 M $\Omega$ max. (at 100 V DC mega) (when the built-in surge absorber is removed)
Dielectric strength	Between the group of external DC terminals and the ground terminal: 1000 V AC at 50/60 Hz (when the built-in surge absorber is removed)
Leakage current	10 mA max.
Noise resistance	1500 Vp-p; Pulse width: 0.1 μs/1 μs; Rising edge: 1-ns pulse
Vibration resistance	10 to 150 Hz (at a double amplitude of 0.1 mm) for 80 minutes each in the X, Y, and Z directions
Shock resistance	200m/s²; 3 times each in 6 directions
Ambient temperature	0 to +50°C at operation, -15 to +60°C at storage (no freezing and condensation)
Ambient humidity	Operating and storage: 35% to 85% (no condensation)
Ambient environment	No corrosive gases
Ground	D-type ground (ground resistance $100\Omega$ or less) * conventional class 3 ground
Degree of protection	IEC60529 IP20 (in-panel)

#### General specifications

Materials	Console: ABS
Weight	Approx. 0.7kg

#### Performance specifications


Terrormanoe opcomo	
Number of connectable sensors	Up to two Z550-SW70 sensors can be connected.
Number of scenes	16
Averaging number	9 levels (1 to 256 times)
Sensor control	6 levels (varies depending on the sensor)
Area specification function	Available
Control of quantity of light	Multi-sensitivity adjustment (dynamic range or sampling interval takes precedence) fixed sensitivity, automatic sensitivity adjustment
Measurement time *2	100 ms (at fixed sensitivity) 120 ms (at automatic sensitivity) 100 ms to 250 ms (when sampling interval takes precedence) 100 ms to 629 ms (when dynamic range takes precedence)
Run Mode	Continuous measurement or trigger measurement
Image preprocessing	Noise removal
Measurement pre- processing	Interpolation processing, filter processing Inclination compensation processing Height and position compensation processing
Detection method	Height position method Reflectance method
Measurement item	Height, Step: 2 pts, Step: 3 pts, Edge position, Width, Edge center, Peak/Bottom, Cross-sectional area, Inclination, Roughness, User-defined
Logging function	The measurement results of up to 3000 measurements can be stored. (It is possible to select after how many measurements their measurement results are stored.)
Output pre-processing	Forced zero, Offset/span adjustment
Profile data output	Up to 1024 height profiles can be output in one batch.  The output format may be either ASCII code or binary format (when sending via XMODEM)
Results output	Terminal block: Judgment result Analog: Measurement result RS-232C: Measurement result, judgment result, profile data
Screen Displays	Image monitor, Trend monitor, Digital monitor, Profile monitor
Tool function	Peripheral image display function, test measurement function
Terminal blocks	11 input points: TRIGGER, LD-OFF, RESET, DI0 to DI7 21 output points: DO0 to DO19 and GATE
RS-232C (Baud rate)	Up to 115 kbps (at XMODEM transmission, external trigger measurement) Normally 38.4 kbps
Monitor interface	1 channel (for pin jack or overscan monitor)
Analog output resolution	The full output scale can be divided into a maximum of 40,000 divisions. Resolution (*3): 0.25 mV ( $\pm$ 5 V), 0.4 $\mu$ A (4 to 20 $\mu$ A)

<sup>\*1</sup> Average current at normal operation after power is turned ON.

<sup>\*2</sup> The sampling interval varies depending on the measurement settings. Check the actual sampling interval on the image monitor.

<sup>\*3</sup> When performing measurement taking the average of every 64 measurements with an OMRON K3AS linear sensor controller connected.


#### Console Z300-KP

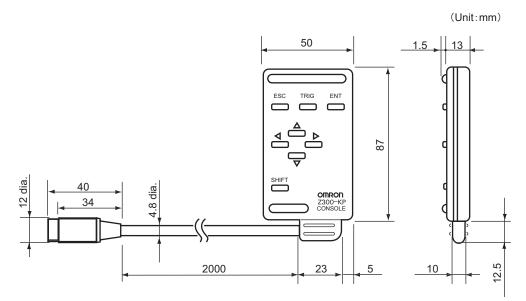

Vibration resistance	10 to 150 Hz at a single-amplitude of 0.15 mm, 4 times for 8 minutes each in 3 directions
Shock resistance	196m/s <sup>2</sup> ; 3 times each in 6 directions
Ambient temperature	0 to +50°C at operation, -25 to +65°C at storage (no freezing and condensation)
Ambient humidity	Operating and storage: 35% to 85% (no condensation)
Ambient environment	No corrosive gases
Degree of protection	IEC60529 IP20 (in-panel)
Minimum bending radius	75mm
Materials	Console: ABS Cable sheathing: Heat-resistant chlorinated vinyl Connector: PC and PBT
Weight	Approx. 135g

#### Sensor Extension Cable Z519-SC1R

(Unit: mm)

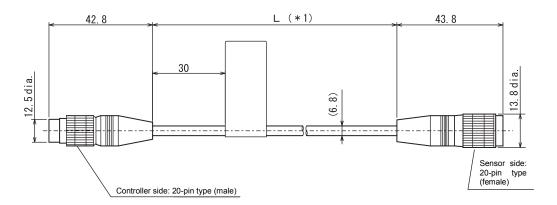


### \*1 Length of Cable

L (mm)	
3000	+50 0
6000	+150 0
8000	+300 0
13000	) <sup>+450</sup>


Ambient temperature	0 to +50°C at operation, -15 to +60°C at storage (no freezing and condensation)
Ambient humidity	Operating and storage: 35% to 85% (no condensation)
Vibration resistance	10 to 150 Hz (at a double amplitude of 0.35 mm) for 8minutes each in the X, Y, and Z directions
Materials	Cable sheathing: Heat-resistant chlorinated vinyl Connector: Zinc alloy and brass
Minimum bending radius	68 mm

#### Monitor Cable F150-VM

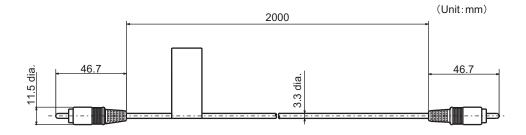

Vibration resistance	10 to 150 Hz at a single-amplitude of 0.15 mm, 4 times for 8 minutes each in 3 directions
Shock resistance	196m/s²; 3 times each in 6 directions
Ambient temperature	0 to +50°C at operation, -25 to +65°C at storage (no freezing and condensation)
Ambient humidity	Operating and storage: 35% to 85% (no condensation)
Ambient environment	No corrosive gases
Degree of protection	IEC60529 IP20 (in-panel)
Minimum bending radius	50 mm
Materials	Cable sheathing: Super heat-resistant chlorinated vinyl Connector: PVC
Weight	Approx. 40g
Accessories	BNC jack adapter

#### Color Liquid Crystal Display Monitor F150-M05L

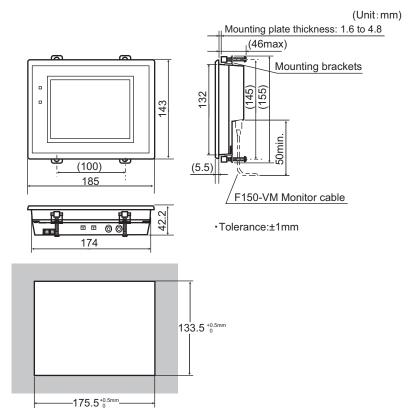

### General specifications

Panel cutout dimensions

Power supply voltage	20.4 to 26.4 V DC
Current consumption	700 mA max.
Vibration resistance	10 to 150 Hz at a single-amplitude of 0.1 mm (maximum acceleration: 15 m/s²), 10 times for 8 minutes each in 3 directions
Shock resistance	150 m/s²; 3 times each in 6 directions
Ambient temperature	0 to +50°C at operation, -25 to +65°C at storage (no freezing and condensation)
Ambient humidity	Operating and storage: 35% to 85% (no condensation)
Ambient environment	No corrosive gases
Degree of protection	IEC60529 IP20
Materials	Case: ABS/PC Display surface: PMMA (acrylic)
Weight	Approx. 610g
Accessories	4 mounting brackets

#### Performance specifications

Panel size	5.5 inches (111.36 (H) x 123 (V) mm)
Panel type	TFT color liquid crystal display
Resolution	320 x 240 dots

### Performance specifications

Image pitch	0.348 (H) x 0.348 (V) mm
Contrast	85:1 (typical)
Viewable angle	25° up/down and 50° left/right (with a contrast ratio > 10)
Luminance	250 cd/m² (typical)
Backlight	Cold cathode fluorescent light
Response speed	60 ms max.
Input signal	NTSC composite video (1.0 V/75 Ω termination)

## Requirements from Regulations and Standards

## **Summary of Requirements to Manufactures**

### For Europe

EN 60825-1 "Safety of Laser Products, Equipment Classification, Requirements and User's Guide" Summary of Manufacturer's Requirements

Requirements	Classification								
subclause	Class 1	Class 1M	Class 2	Class 2M	Class 3R	Class 3B	Class 4		
Description of	Safe under	As for	Low power;	As for	Direct	Direct	High		
hazard class	reasonably	Class 1	eye	Class 2	intrabeam	intrabeam	power;		
	foreseeable	except may	protection	except may	viewing	viewing	diffuse		
	conditions	be	normally	be more	may be	normally	reflections		
		hazardous	afforded by	hazardous	hazardous	hazardous	may be		
		if user employs	aversion responses	if user employs			hazardous		
		optics	responses	optics					
Protective housing			•	oduct; limits a	ccess necess	ary for perfor	mance of		
		functions of			ı				
Safety interlock in	_	prevent remo			_	prevent remo			
protective housing		mission value	s are below th	nat for Class		ccessible emi			
	3R				are below th	at for Class 3			
Remote control	Not required					Permits easy addition of external interlock in laser			
						installation	riock in laser		
Key control	Not required	Not required					Laser inoperative when		
rtoy contact	110t roquirou	key is removed							
Emission warning	Not required				Give audible	or visible war	or visible warning when		
device						switched on or if capacitor bank			
					of pulsed laser is being charged. For				
					Class 3R on radiation is e	ly, applies invi	sible		
A44	Niet ee ee iee d				Taulation is e		h : -l - 4h -		
Attenuator	Not required					Give means On/Off switc			
						temporarily t			
						beam	o block		
Location controls	Not required				Controls so	ocated that th	ere is no		
				danger of exposure to AEL above					
						2 when adjus	stments are		
Viewing optics	Not Emission from all viewing systems must be below Class 1M AEL								
Trouming option	required required								
Scanning	Scan failure shall not cause product to exceed its classification								
Class label	Required wording Figures A required wording								
Aperture label	Not required Specified wording required								
Service entry label		Required as appropriate to the class of accessible radiation							
Override interlock	Required un	der certain co	nditions as ap	propriate to the	ne class of las	er used			
label									

Requirements	Classification						
subclause	Class 1	Class 1M	Class 2	Class 2M	Class 3R	Class 3B	Class 4
Wavelength range label	Required for certain wavelength ranges						
LED label	Make require	Make required word substitutions for LED products					
User information		Operation manuals must contain instructions for safe use. Additional requirement apply for Class 1M and Class 2M					
Purchasing and service information	Promotion brinformation	Promotion brochures must specify product classification; service manuals must contain safety information				ontain safety	

Note: 1. This table is intended to provide a convenient summary of requirements. See text of this standard for complete requirements.

- 2. For the safety medical laser products, IEC 60601-2-22 applies.
- 3. AEL: Accessible Emission Limit

The maximum accessible emission level permitted within a particular class. For your reference, see ANSI Z136.1-1993, Section 2.

Symbol and border: black Background: yellow



Figure A Warning label - Hazard symbol

Legend and border: black Background: yellow

### For U.S.A

FDA (Compliance Guide for Laser Products, 1985, according to 21 CFR1040.10)

Dogwiyowanta	Class (see note 1)						
Requirements	I	lla	II	Illa	IIIb	IV	
Performance (all	laser products)						
Protective housing	R (see note 2)	R (see note 2)	R (see note 2)	R (see note 2)	R (see note 2)	R (see note 2)	
Safety interlock	R (see notes 3,4)	R (see notes 3,4)	R (see notes 3,4)	R (see notes 3,4)	R (see notes 3,4)	R (see notes 3,4)	
Location of controls	N/A	R	R		R	R	
Viewing optics	R	R	R	R	R	R	
Scanning safeguard	R	R	R	R	R	R	
Performance (las	er systems)	I	I	I	I	I	
Remote control connector	N/A	N/A	N/A	N/A	R	R	
Key control	N/A	N/A	N/A	N/A	R	R	
Emission indicator	N/A	N/A	R	R	R (see note 10)	R (see note 10)	
Beam attenuator	N/A	N/A	R	R	R	R	
Reset	N/A	N/A	N/A	N/A	N/A	R (see note 13)	
Performance (spe	ecific purpose p	oroducts)					
Medical	S	S	S	S (see note 8)	S (see note 8)	S (see note 8)	
Surveying, leveling, alignment	S	S	S	S	NP	NP	
Demonstration	S	S	S	S	S (see note 11)	(see note 11)	
Labeling (all lase	r products)						
Certification & identification	R	R	R	R	R	R	
Protective housing	D (see note 5)	D (see note 5)	D (see note 5)	D (see note 5)	D (see note 5)	D (see note 5)	
Aperture	N/A	N/A	R	R	R	R	
Class warning	N/A	R (see note 6)	R (see note 7)	R (see note 9)	R (see note 12)	R (see note 12)	
Information (all la	ser products)						
User information	R	R	R	R	R	R	
Product literature	N/A	R	R	R	R	R	
Service information	R	R	R	R	R	R	

#### Abbreviations:

R: Required.

N/A: Not applicable.

Requirements: Same as for other products of that Class. Also see footnotes.

NP: Not permitted.

D: Depends on level of interior radiation.

#### Footnotes:

- Note 1: Based on highest level accessible during operation.
- Note 2: Required wherever & whenever human access to laser radiation above Class I limits is not needed for product to perform its function.
- Note 3: Required for protective housings opened during operation or maintenance, if human access thus gained is not always necessary when housing is open.
- Note 4: Interlock requirements vary according to Class of internal radiation.
- Note 5: Wording depends on level & wavelength of laser radiation within protective housing.
- Note 6: Warning statement label.
- Note 7: CAUTION logotype.
- Note 8: Requires means to measure level of laser radiation intended to irradiate the body.
- Note 9: CAUTION if 2.5 mW cm<sup>2</sup> or less, DANGER if greater than 2.5 mW cm<sup>-2</sup>.
- Note 10: Delay required between indication & emission.
- Note 11: Variance required for Class IIb or IV demonstration laser products and light shows.
- Note 12: DANGER logotype.
- Note 13: Required after August 20, 1986.

## **Summary of Requirements to User** For Europe

EN 60825-1

Requirements				Classification	1		
subclause	Class 1	Class 1M	Class 2	Class 2M	Class 3R	Class 3B	Class 4
Laser safety officer		but recommer t viewing of the	Required				
Remote interlock	Not required					Connect to re	oom or door
Key control	Not required					Remove key use	
Beam attenuator	Not required					When in use inadvertent e	•
Emission indicator device	Not required  Indicates laser is energized for non-visible wave- lengths					Indicates laser is energized	
Warning signs	Not required				-	Follow precautions on warning signs	
Beam path	Not required	Class 1M as for Class 3B (see note 2)	Not required	Class 2M as for Class 3B (see note 3)	Terminate beam at end of useful length		
Specular reflection	No require- ments	Class 1M as for Class 3B (see note 2)	No require- ments	Class 2M as for Class 3B (see note 3)	Prevent unintentional reflections		
Eye protection	No requirements					Required if e and administ dures not pra MPE exceed	rative proce- acticable and
Protective clothing	No requirements					Sometimes required	Specific require-ments
Training	No require- ments	Class 1M as for Class 3R (see note 2)	No require- ments	Class 2M as for Class 3R (see note 3)	Required for nance perso	all operator an	nd mainte-

Note: 1. This table is intended to provide a convenient summary of requirements. See text of this standard for complete precautions.

- 2.Class 1M laser products that failed condition 1 of table10 of the standard. Not required for Class 1M laser products that failed condition 2 of table 10 of the standard. See the text for details.
- 3.Class 2M laser products that failed condition 1 of table10 of the standard. Not required for Class 2M laser products that failed condition 2 of table 10 of the standard. See the text for details.

### For U.S.A

ANSI Z136.1:1993 "American National Standard for the Safe Use of Lasers" Control Measures for the Four Laser Classes

Control measures			Cla	ssification		
Engineering Controls	1	2a	2	3a	3b	4
Protective Housing (4.3.1)	X	X	X	X	X	X
Without Protective Housing			l establish Alte			
(4.3.1.1)	200 (000 )	1010 2) 31101	r Cotabiloti 7 tit	siriate contro	10	
Interlocks on Protective Housing	☆	計	☆	☆	Х	X
(4.3.2)	~	~	~	~	^	^
Service Access Panel (4.3.3)	⋨	☆	<b>A</b>	☆	X	X
Key Control (4.3.4)					•	X
Viewing Portals (4.3.5.1)			MPE	MPE	MPE	MPE
Collecting Optics (4.3.5.2)	MPE	MPE	MPE	MPE	MPE	MPE
• , , ,			IVIF C		X	X
Totally Open Beam Path (4.3.6.1)						
Limited Ones Been Beth (4.0.0.0)					NHZ	NHZ
Limited Open Beam Path (4.3.6.2)					X	X
					NHZ	NHZ
Enclosed Beam Path (4.3.6.3)		-	.1 and 4.3.2 ft	uitilled		
Remote Interlock Connector (4.3.7)	+				•	X
Beam Stop or Attenuator (4.3.8)					•	X
Activation Warning Systems (4.3.9)					•	X
Emission Delay (4.3.9.1)						X
Indoor Laser Controlled Area					X	Х
(4.3.10)					NHZ	NHZ
Class 3b Laser Controlled Area					X	
(4.3.10.1)						
Class 4 Laser Controlled Area						X
(4.3.10.2)						
Laser Outdoor Controls (4.3.11)					X	X
					NHZ	NHZ
Laser in Navigable Airspace				•	•	•
(4.3.11.2)						
Temporary Laser Controlled Area	☆	☆	☆	⋨		
(4.3.12)	MPE	MPE	MPE	MPE		
Remote Firing & Monitoring						•
(4.3.13)						
Labels (4.3.14 and 4.7)	X	X	X	Х	X	Х
Area Posting (4.3.15)				•	X	X
7 100 1 001119 (1.0.10)					NHZ	NHZ
Administrative & Procedural	1	2a	2	3a	3b	4
Controls		24	_	Ju	O.D	•
Standard Operating Procedures					•	X
(4.4.1)						^
				L SO Dot	ormination	
Output Emission Limitations (4.4.2)	+				ermination	V
Education and Training (4.4.3)			•	•	X	X
Authorized Personnel (4.4.4)				 V	X	X
Alignment Procedures (4.4.5)			X	X	X	X
Protective Equipment (4.4.6)					•	X
Spectator (4.4.7)					•	X
Service Personnel (4.4.8)	☆	☆	☆	☆	X	X
	MPE	MPE	MPE	MPE		
Demonstration with General Public	MPE+		X	X	X	X
(4.5.1)						

Control measures			Class	fication		
Laser Optical Fiber Systems	MPE	MPE	MPE	MPE	X	X
(4.5.2)						
Laser Robotic Installations (4.5.3)					Х	Х
					NHZ	NHZ
Eye Protection (4.6.2)					•	Х
					MPE	MPE
Protective Windows (4.6.3)					Х	Х
					NHZ	NHZ
Protective Barriers and Curtains					•	•
(4.6.4)						
Skin Protection (4.6.5)					X	X
					MPE	MPE
Other Protective Equipment (4.6.5)	Use may be	required				
Warning Signs and Label (4.7)			•	•	X	Х
(Design Requirements)					NHZ	NHZ
Service and Repairs (4.8)	LSO Determ	ination				
Modification of Laser Systems	LSO Determination					
(4.9)						

Note: 1.LEGEND

X: Shall

• : Should

---: No requirement

☆: Shall if enclosed Class 3b or Class 4

MPE:Shall if MPE is exceeded

NHZ: Nominal Hazard Zone analysis required

Applicable only to UV and IR Lasers (4.5.1.2)

2.LSO: Laser Safety Officer

An individual shall be designated the Laser Safety Officer with the authority and responsibility to monitor and enforce the control of laser hazards, and to effect the knowledgeable evaluation and control of laser hazards. For your reference, see ANSI Z136.1993, Section 1.3.

### **Definitions of Laser Classification**

### For Europe

Laser Product Classifications

ΕN

Class	Description
Class 1	Lasers which are safe under reasonably foreseeable conditions of operation.
Class 2	Lasers emitting visible radiation in the wavelength range from 400 nm to 700 nm. Eye protection is normally afforded by aversion responses including the blink reflex.
Class 3A	Lasers which are safe for viewing with the unaided eye. For laser emitting in the wavelength range from 400 nm to 700 nm, protection is afforded by aversion responses including the blink reflex. For other wavelengths the hazard to the unaided eye is no greater than for Class 1. Direct intrabeam viewing of Class 3A lasers with optical aides (e.g., binoculars, telescopes, microscopes) may be hazardous.
Class 3B	Direct intrabeam viewing of these lasers is always hazardous. Viewing diffuse reflections is normally safe (see note).
Class 4	Lasers which are also capable of producing hazardous diffuse reflections. They may cause skin injuries and could also constitute a fire hazard. Their use requires extreme caution.

Note: Conditions for safe viewing of diffuse reflections for Class 3B visible lasers are: minimum viewing distance of 13 cm between screen and cornea and a maximum viewing time of 10 s. Other viewing conditions require a comparison of the diffuse reflection exposure with the MPE.

### For U.S.A


Comparison of Classifications between FDA and ANSI

Class	FDA definition	ANSI description
Class I/1	Limits applicable to devices that have emissions in the ultraviolet, visible, and infrared spectra, and limits below which biological hazards have not been established.	A Class 1 laser is considered to be incapa- ble of producing damaging radiation levels during operation and maintenance and is, therefore, exempt from any control mea- sures or other forms of surveillance.
Class IIa/2a	Limits applicable to products whose visible emission does not exceed Class I limits for emission durations of 1,000 seconds or less and are not intended for viewing.	Class 2 lasers are divided into two sub- classes, 2 and 2a. A Class 2 laser emits in the visible portion of the spectrum (0.4 to 0.7 µm) and eye protection is normally
Class II/2	Limits applicable to products that have emissions in the visible spectrum (400 to 710 nm) for emission durations in excess of 0.25 second, providing that emissions for other durations and/or wavelengths do not exceed the Class I limits. Class II products are considered hazardous for direct long-term ocular exposure.	afforded by the aversion response including the blink reflex.

Class	FDA definition	ANSI description
Class IIIa/3a	Limits to products that have emissions in the visible spectrum and that have beams where the total collectable radiant power does not exceed 5 milliwatts.	Class 3 lasers are divided into two sub- classes, 3a and 3b. A Class 3 laser may be hazardous under direct and specular reflec- tion viewing conditions, but the diffuse
Class IIIb/3b	Limits applicable to devices that emit in the ultraviolet, visible, and infrared spectra. Class IIIb products include laser systems ranging from 5 to 500 milliwatts in the visible spectrum. Class IIIb emission levels are ocular hazards for direct exposure throughout the range of the Class, and skin hazards at the higher levels of the Class.	reflection is usually not a hazard.
Class IV/4	Exceeding the limits of Class IIIb and are a hazard for scattered reflection as well as for direct exposure.	A Class 4 laser is a hazard to the eye or skin from the direct beam and sometimes from a diffuse reflection and also can be a fire hazard. Class 4 lasers may also produce lasergenerated air contaminants and hazardous plasma radiation.

## **Revision History**

A manual revision code appears as a suffix to the catalog number on the front cover of the manual.

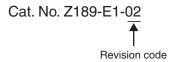

The following table outlines the changes made to the manual during each revision. Page numbers refer to the previous version.

Revision code	Revision date	Revised content
01	October, 2003	First edition
02	May, 2005	Pages 2 to 4: Changed warranty and liability information.  Page 5: Added information on general precautions.  Page 18: Removed video monitor diagram.  Page 20: Changed information in DIP switch settings table.  Page 58: Removed information on video monitor.  Pages 59 to 66: Replaced information on laser classifications, regulations, and standards.